



1. Ensure adequate PPE is worn before handling or cleaning the filter housing.
2. Used in accordance with local infection control procedures and policies.
3. Ensure proper fit and seal before commencing use.
4. Replace 64mm filter disc every 24 hours of use.
5. Minimize unnecessary contact with or handling of the filter.
6. Perform hand hygiene with soap and water or an alcohol-based hand sanitizer before and after touching or adjusting the filter.
7. Do not use in potentially explosive atmospheres.
8. This device does NOT use colour to indicate filter type(s).
9. Filter inserts are for SINGLE USE ONLY.

APPROVED FILTER DISCS FOR THE MASK AIR FILTER		
Manufacturer	Material	Classification
ENDLESS SUMMER TECHNOLOGIES 19B Mzimkhulu Drive Dube Tradeport KwaZulu-Natal, South Africa +27 11 444 3394	Respilon RFT	FMP2

 Central University of Technology,
Free State, by the Centre for Rapid
Prototyping and Manufacturing (CRPM)
 +27 51 507 3253
 20 President Brand Street
Bloemfontein
South Africa
9300




CSIR

our future through science


L.I.F.E

Lung Inspiratory Flow Enabler

MASK FILTER Instructions For Use

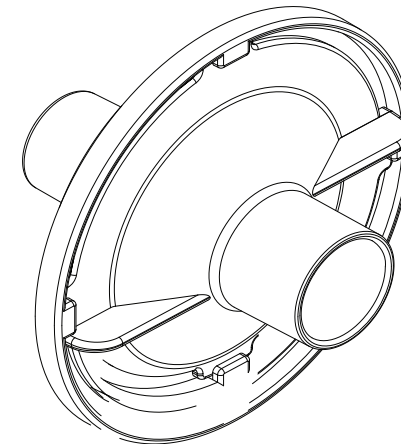

EMERGENCY USE ONLY

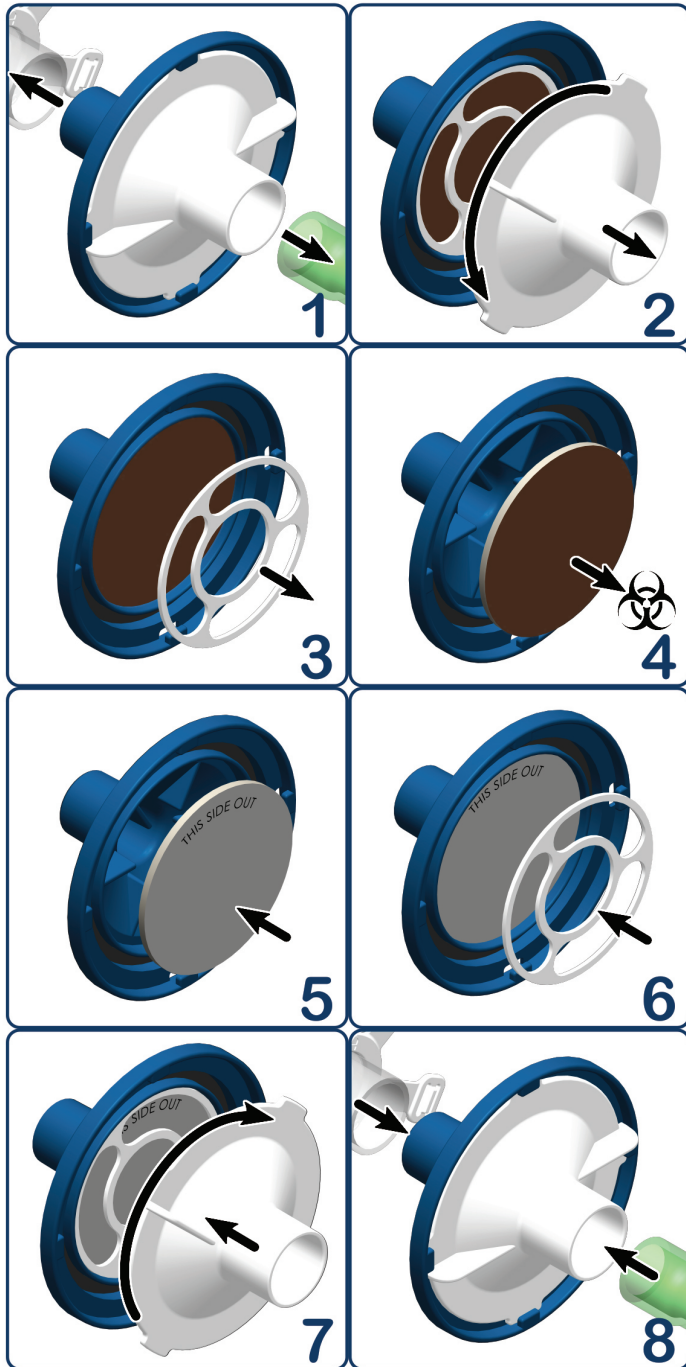

REPLACING FILTER DISC (EVERY 24 HOURS OF USE)

Only use device with approved 64mm diameter filter discs.

Ensure adequate PPE is worn before handling the filter housing.

1. Disconnect the tubing from the filter housing.

Submerge the filter housing in cold disinfectant immediately after disconnecting it from tubing and leave submerged for at least 10 minutes.

2. Remove from cold disinfectant and turn the front assembly of the filter housing anti-clockwise to open the filter disc cavity.

3. Remove the filter ring that holds the filter disc in place.

4. Remove used filter disc and safely discard.

Clean the filter housing by following Cleaning and Disinfecting guidelines for Respiratory Equipment.

5. Remove unused filter disc from packaging. Insert the new filter disc in the bottom housing so that the markings on the filter insert can be seen and make sure that the rubber seal is still in place.

6. Replace the filter ring that holds the filter in place.

7. Place the top half of the filter housing in the cavity and turn clockwise to lock.

8. Reconnect the tubing to the filter housing.

If the device becomes damaged it should be withdrawn from use.